

**Betriebsanleitung**  
**Operating Instructions**  
**Instructions de service**  
**Istruzioni d'uso**  
**Handleiding**  
**Instrucciones para el manejo**  
**Manual de instruções**  
**Naudojimosi instrukcija**  
**Kasutusjuhend**  
**Lietošanas instrukcija**  
**Οδηγίες χρήσης**  
**取扱説明書**  
**사용설명서**

**Driftsinstruks**  
**Driftsinstruktioner**  
**Käyttöohje**  
**Driftsvejledning**  
**Instrukcja obsługi**  
**Kezelési útmutató**  
**Návod k obsluze**  
**Navodilo za uporabo**  
**Návod na obsluhu**  
**El Kitabi**  
**Инструкция по эксплуатации**  
**使用说明书**

**DT 4.8**

2006/42/EG









DIN EN ISO 14001:2005

DIN EN ISO 9001  
001929 QM



<p><b>AIR</b></p>			<p>DIN EN ISO 3744</p>	<p> <math>L_{pA} = 58 \text{ dB(A)} - 50\text{Hz}</math>  <math>L_{pA} = 61,5 \text{ dB(A)} - 60\text{Hz}</math>  <math>K_{pA} = 3 \text{ dB(A)}</math> </p>


	<p> <math>A &gt; 100\text{mm}</math>  <math>A &gt; 4"</math> </p>	<p> <math>&gt; 5^\circ\text{C}/41^\circ\text{F}</math>  <math>&lt; 45^\circ\text{C}/113^\circ\text{F}</math> </p>	<p>max. 90%</p>	<p>max. 800m</p>
<p><b>1</b></p> <p>11,5 kg 25,3 lbs</p>	<p><b>2</b></p>			

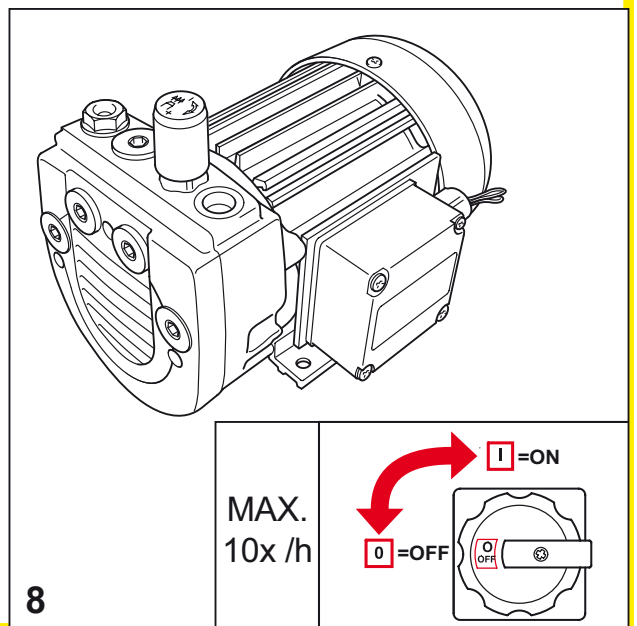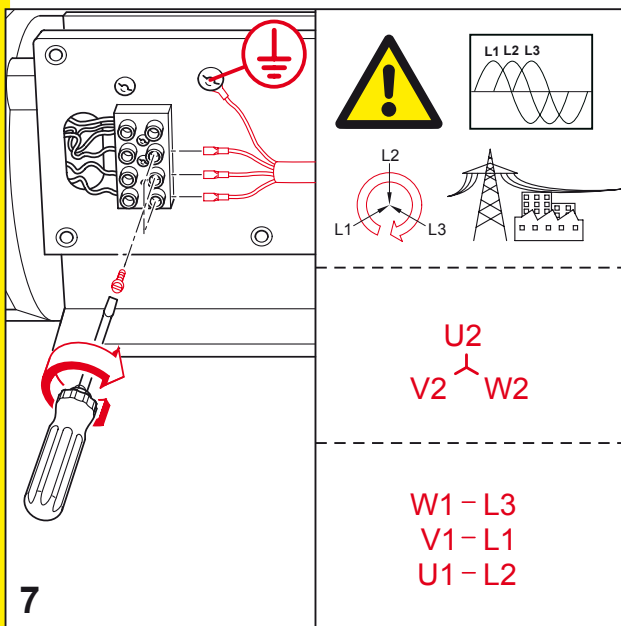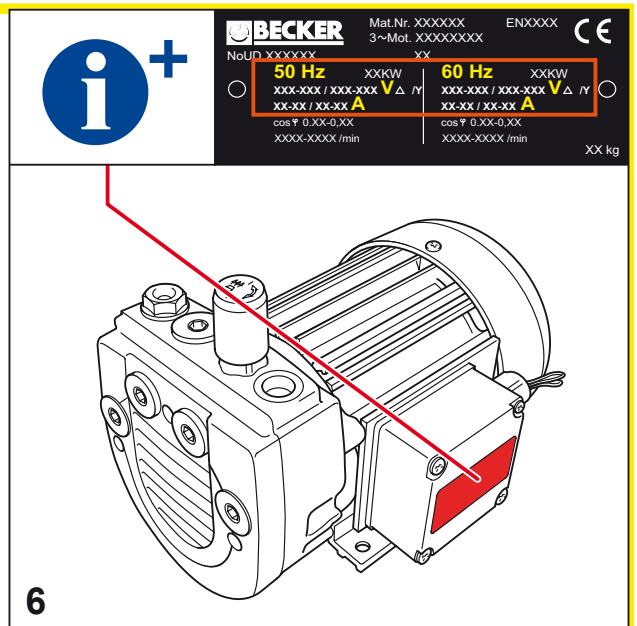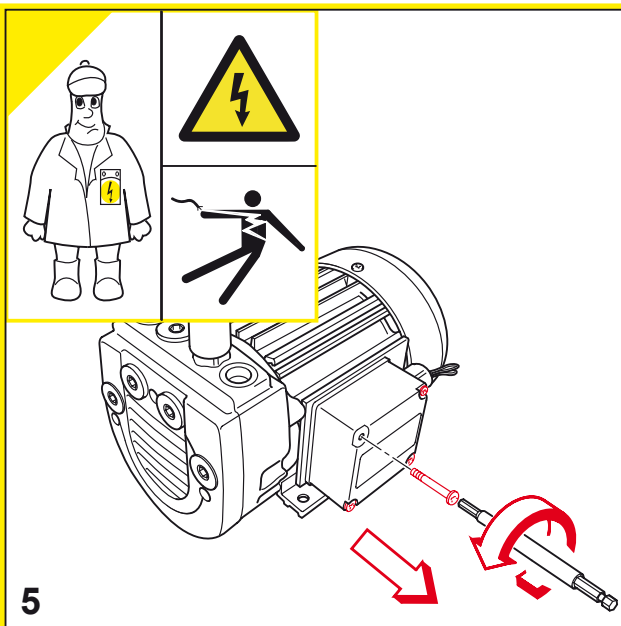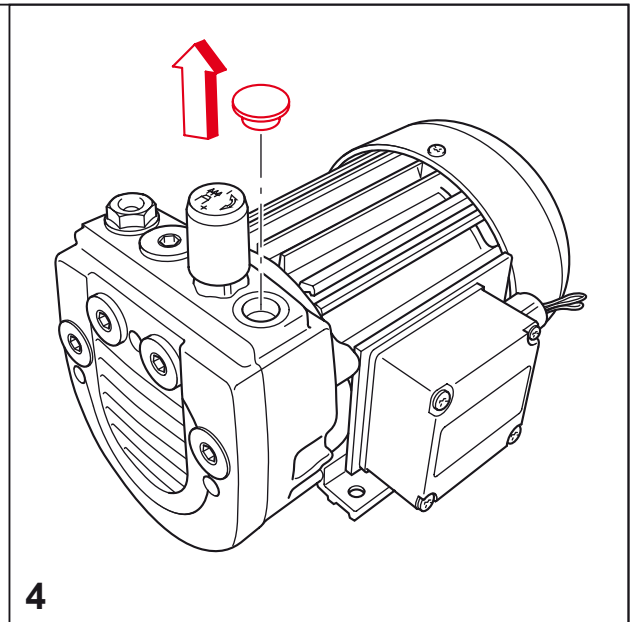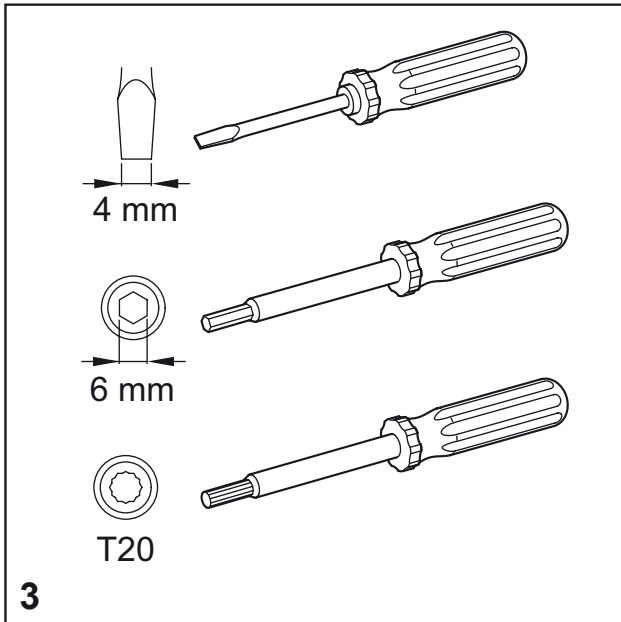2810002720100 03/10




<b>i+</b>	<b>BECKER</b> Mat.Nr. XXXXXX 3~Mot. XXXXXXXX ENXXXX CE	
	NoUn XXXXXX	xx
○	<b>50 Hz</b> XXkW XXX-XXX / XXX-XXX V Δ /Y XX-XX / XX-XX A cos φ 0.XX-0.XX XXXX-XXXX /min	<b>60 Hz</b> XXkW XXX-XXX / XXX-XXX V Δ /Y XX-XX / XX-XX A cos φ 0.XX-0.XX XXXX-XXXX /min
		XX kg


 <b>PRESSURE</b>	< 2m	$\varnothing \frac{3}{8}''$
	> 2m...10m	$\varnothing \frac{3}{4}''$ + 

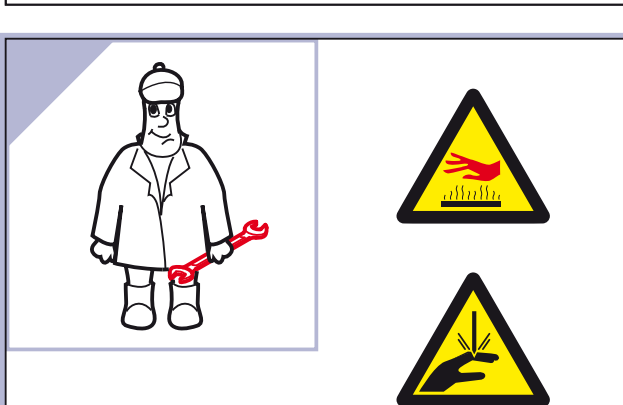


MAX.	+1,0 bar
	+29,5 in.HG

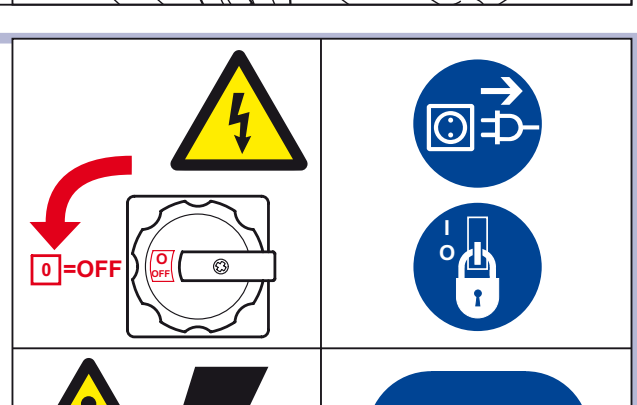


**A.**

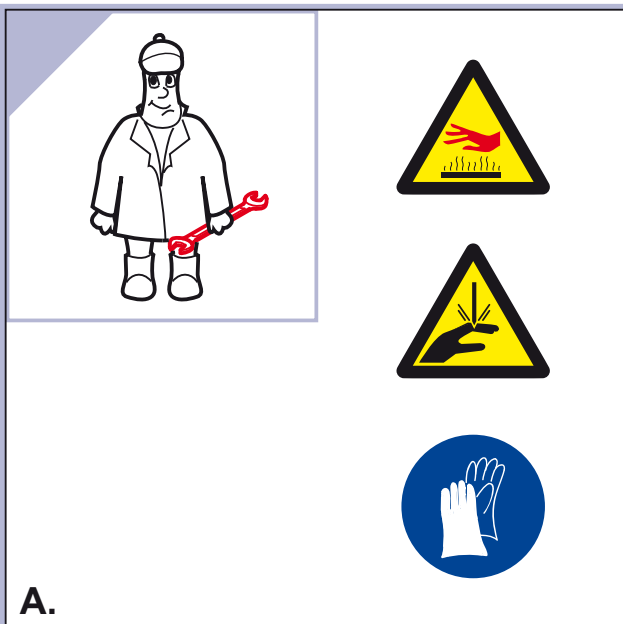


**B.**

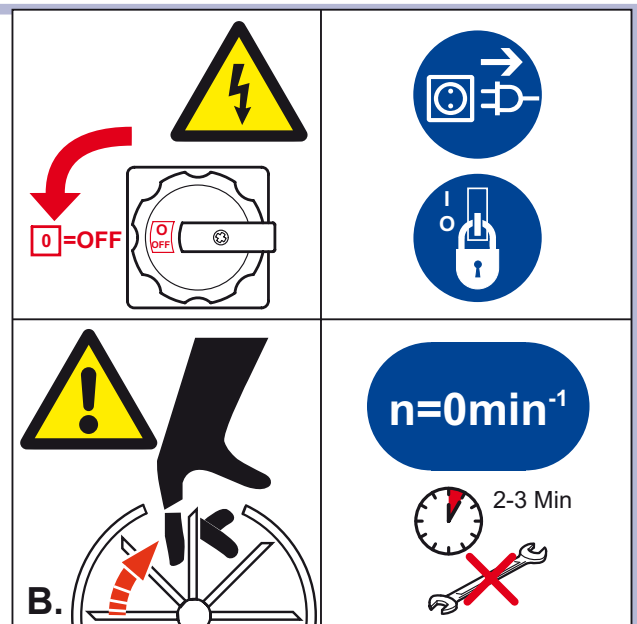

**C.**

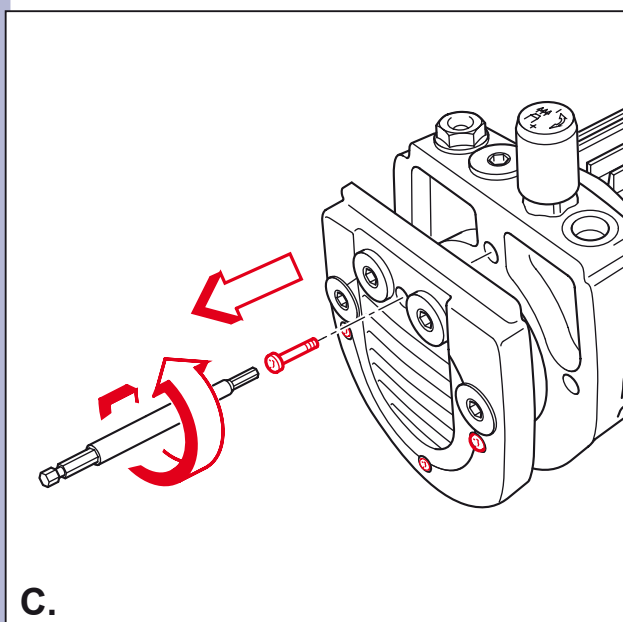

**D.**

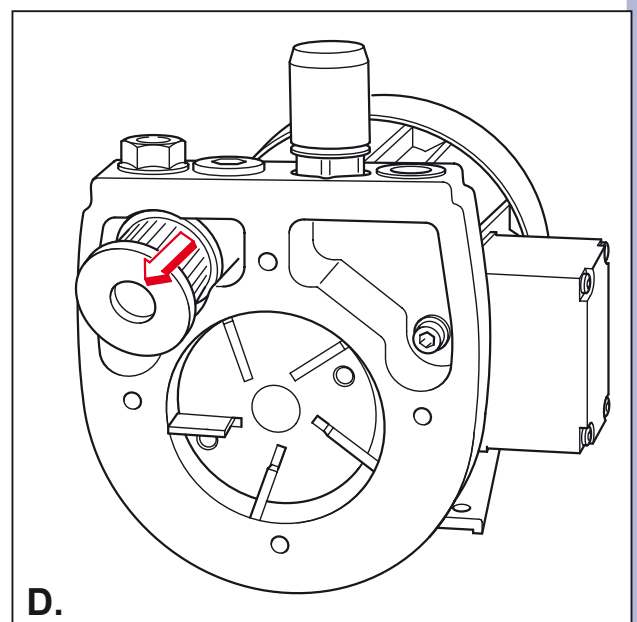

<p>D: 30 mm H: 32 mm No.: 909581</p>		

**E.**

<b>3000 h</b>	
	$A_{MIN} > 12,5mm$ $A_{MIN} < 12,5mm$
<p>DT 4.8 → No. 90138800005 (SET)</p>	

**F.**


**G.**

<b>500 h</b>	

**H.**

<p><a href="http://www.becker-international.com">www.becker-international.com</a></p>	

**BECKER**

Gebr. Becker GmbH  
Hölker Feld 29-31  
D-42279 Wuppertal

[info@becker-international.com](mailto:info@becker-international.com)

**(D) Service:**  
Tel: +49 (0)202 697-171  
Fax: +49 (0)202 64 44 74